



Fountains

Bird Baths - Benches - Garden Statuary



Fountain Care Sheet

- Routine maintenance on your fountain is essential for fountain enjoyment. Fountains should be cleaned at least once a month. Drain the fountain and wipe all the surfaces with a sponge or soft cloth and change the water frequently. Never let your fountain run dry, lack of water will burn out your pump. We recommend that you only run your fountain when you are home since water levels cannot be monitored when you are away. Depending on the climate, you will need to check the water level every 1-3 days.
- Remove debris, such as leaves, twigs and insects, from the water several times a week, using a small net. Check the water pump to remove any debris that might clog it, this will keep your pump life longer.
- Any white residue (white scale, lime scale, calcium buildup, or efflorescence) that builds up on the fountain should be removed immediately. This buildup is normal and unavoidable in areas with high mineral content in local water supply. The best way to remove any white residue would be to gently scrub a mixture of 1 part white vinegar and 3 parts water, that will work and removing the residue.
- During the winter months, protect your fountain from harsh freezing temperatures by draining the fountain and covering it with a weather proof tarp. This will protect your fountain from cracking/and or severe damage.
- Chlorine based product should never be used to control algae in your fountain, chlorine will damage the pump and discolor the concrete. Fountain and pump damage due to chlorine will not be covered by our warranty.
- All fountains have a one-year manufacture's warranty. Warranty is voided by ice damage, thermal shock, misuse, either intentional or accidental, or modification made to items after sale. Pumps have a one-year warranty. Warranty is voided if the pump has been disassembled, any alterations made to the pump or cord, the pump has been run dry, obvious misuse of the product. Please keep your original receipt.

CAUTION

- Excessive weight or pressure on the fountain may cause it to fall. KEEP CHILDREN AND OTHERS FROM CLIMBING, SITTING, OR LEANING ON THE FOUNTAIN AND ITS COMPONENTS. All fountains, and related products, are intended to be used for decorative purposes only. Briseno Azteca Imports is not responsible during or after warranty period, for any accidents, misuse or mishandling of our fountains.